


STUPR/L



TP□□

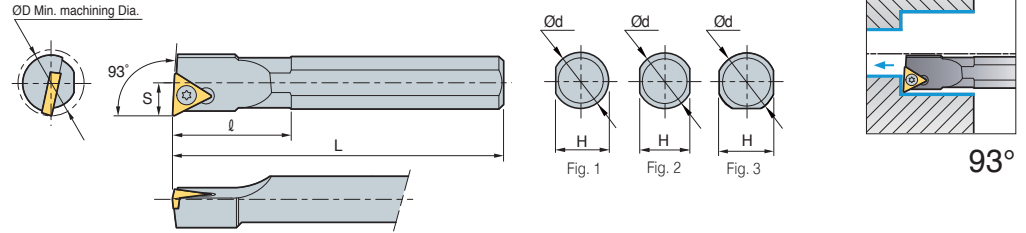

Steel shank type

• R type insert (mm)

Designation	ØD	Ød	H	L	S	ℓ	Insert	Screw	Wrench	Fig.
S08K-STUPR/L-08	10	8	7	125	4	18	TP□□0802□□R/L	FTNA02205	TW06P	2
A08F-STUPR/L-08	10	8	7.5	80	4	18				

Carbide shank type

(mm)

Designation	ØD	Ød	H	L	S	ℓ	Insert	 Screw	 Wrench	Fig.
C08K-STUPR/L-08	10	8	7	125	5		TP□T0802□□	FTNA02205	TW06P	2
C10K-STUPR/L-11	12	10	9	125	6		TP□T1103□□	FTNA0305	TW09P	
C10M-STUPR/L-11	12	10	9	150	6			FTNA0307	TW09P	
C12M-STUPR/L-11	15	12	11	150	8					
C12Q-STUPR/L-11	15	12	11	180	8					
C16R-STUPR/L-11	20	16	15	200	10					
C16S-STUPR/L-11	20	16	15	250	10					
C20R-STUPR/L-11	25	20	18	200	13					
C20S-STUPR/L-11	25	20	18	250	13					
C20R-STUPR/L-16	25	20	18	200	13		TP□T1604□□	FTNA0408	TW15P	
C20S-STUPR/L-16	25	20	18	250	13					
C25T-STUPR/L-16	32	25	23	300	17					
E08K-STUPR/L-08	10	8	7	125	5		TP□T0802□□	FTNA02205	TW06P	2
E10K-STUPR/L-11	12	10	9	125	6		TP□T1103□□	FTNA0305	TW09P	
E10M-STUPR/L-11	12	10	9	150	6			FTNA0307	TW09P	
E12M-STUPR/L-11	15	12	11	150	8					
E12Q-STUPR/L-11	15	12	11	180	8					
E16R-STUPR/L-11	20	16	15	200	10					
E16S-STUPR/L-11	20	16	15	250	10					
E20R-STUPR/L-11	25	20	18	200	13					
E20S-STUPR/L-11	25	20	18	250	13					
E20R-STUPR/L-16	25	20	18	200	13		TP□T1604□□	FTNA0408	TW15P	
E20S-STUPR/L-16	25	20	18	250	13					
E25T-STUPR/L-16	32	25	23	300	17					

Applicable inserts **B81~B83**

• Use left handed insert for right handed holder